

**KEY**

- 1. Bed joint reinforcement
- 2. Expanded metal lathing
- 3. Concrete lintel
- 4. Quinn lite bolckwork


**NOTE**

Bed joint reinforcement should be placed in 2 no. courses above and below openings and should extend min 600mm beyond opening.

Bed joint reinforcement to be Austenitic Stainless steel.

**NOTE**

Expanded metal lathing to be placed across junction between concrete lintel and Quinn Lite blocks prior to plastering. This prevents cracking caused by differential movement.

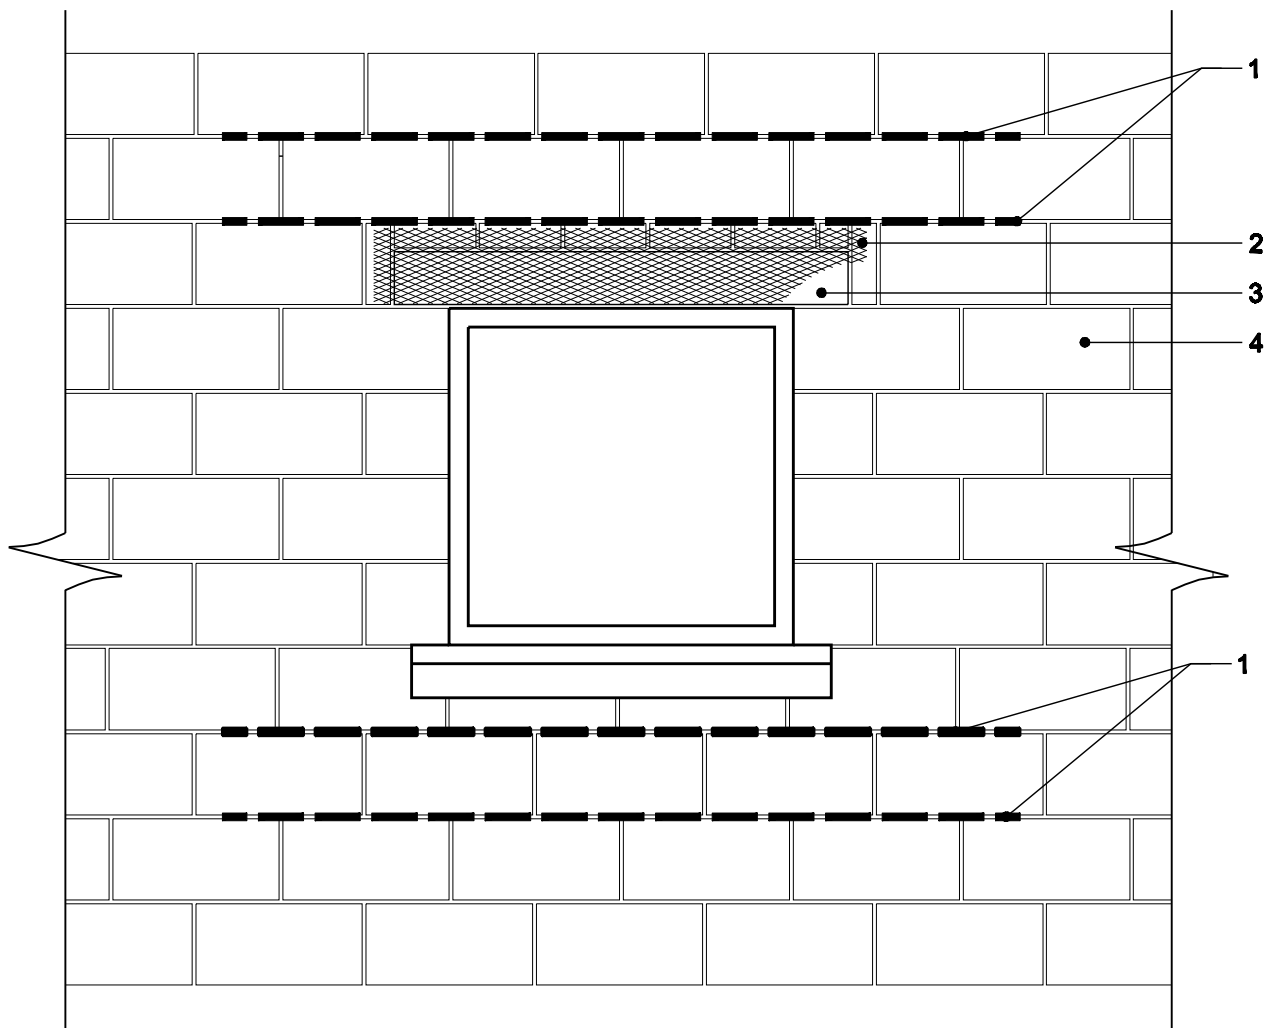

<b>PROJECT</b>	<b>DRAWING TITLE</b> Bed Joint Reinforcement	<b>DRAWING NO.</b>	<b>REVISION</b>
copyright© The information is supplied in good faith and no liability can be accepted for any loss or damage resulting from use.	<b>QUINN REF</b> QL-TD-020	<b>DATE</b>	<b>SCALE</b> 1.5
<b>QUINN</b> group	Quinn Group, Head Office, Derrylin, Co. Fermanagh, BT92 9AU Tel:+44 (0) 28 6774 8866 Fax: +44 (0) 28 6774 8800 Email: General Enquires: info@quinn-group.com Technical Enquires: technical@quinn-group.com		